

Radio Shack

Cat. No. 12-789

AM/FM Pocket Radio with Mono Earphone

Your Radio Shack AM/FM Pocket Radio with Mono Earphone is designed for your active lifestyle. Its portable, lightweight design lets you listen to music, sports, or news almost anywhere you go.



Its features include:

FM/AM Selection — lets you listen to FM or AM stations.

Built-In Speaker — lets you listen to your radio without an earphone.

Earphone Jack — lets you connect the supplied mono earphone or any pair of headphones with a 1/8-inch plug to the radio.

FM Telescopic Antenna — gives you better reception.

Built-In Belt-Clip — lets you attach your radio to your belt or waistband.

© 1995 Tandy Corporation.
All Rights Reserved.

Radio Shack is a registered trademark used by Tandy Corporation.

INSTALLING BATTERIES

You need two AA batteries to power the radio. For the best performance and longest battery life, we recommend alkaline batteries, such as Radio Shack Cat. No. 23-552.

Battery Ribbon

(illus)

Battery
Compartment

Follow these steps to install the batteries.

1. Slide the battery compartment cover in the direction of the arrow, and lift off the cover.
2. Install the batteries on top of the battery ribbon and as indicated by the polarity symbols (+ and -) marked inside the compartment.

Notes:

- You must insert a battery into the lower compartment before you insert one into the upper compartment.
- Use only fresh batteries of the required size and type.

3. Replace the cover.

Note: If the radio operates erratically and cannot receive strong FM stations, replace the batteries.

PLAYING THE RADIO

(illus)

1. Set **VOLUME** to its lowest setting.
2. Set **OFF/FM/AM** to **FM** or **AM** to turn on the radio and select the band.
3. Adjust **VOLUME** to a comfortable listening level.
4. Rotate **TUNING** to tune to the desired station.

To turn off the radio, set **OFF/FM/AM** to **OFF**.

Note: For better reception of FM signals, fully extend the antenna. For better reception of AM signals, rotate the radio.

USING THE EARPHONE

To listen in privacy, you can plug the supplied earphone, or any pair of headphones with a $\frac{1}{8}$ -inch plug, into the **PHONE** jack. The built-in speaker automatically disconnects.

(illus)

Listening Safely

To protect your hearing, follow these guidelines when you use earphones.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Traffic Safety

Do not listen to the radio while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and is illegal in some areas.

Even though some earphones are designed to let you hear some outside sounds when listening at normal volume levels, they still present a traffic hazard.

USING THE BELT CLIP

Slide the belt clip over your belt or waistband to carry the radio everywhere you go.

(illus)

To remove the belt clip from the radio, use a Phillips screwdriver to remove the belt clip's screws.

MAINTENANCE

Your Radio Shack AM/FM Pocket Radio with Mono Earphone is an example of superior design and craftsmanship. The following suggestions will help you care for your radio so you can enjoy it for years.



Keep the radio dry. If it gets wet, wipe it dry immediately.



Use and store your radio only in normal temperature environments.



Handle your radio gently and carefully.



Keep your radio away from dust and dirt, which can cause premature wear of parts.



Wipe your radio with a damp cloth occasionally to keep it looking new.

Modifying or tampering with your radio's internal components can cause a malfunction, invalidate its warranty, and void your FCC authorization to operate it. If your radio is not performing as it should, take it to your local Radio Shack store for assistance.

FCC Information

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn off your radio. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio away from the TV or other radio.
- Contacting your local Radio Shack store for help.

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

SPECIFICATIONS

Operating Frequencies.....(AM) 530—1710 kHz
(FM) 88—108 MHz

Power Sources Two AA Batteries (Cat. No. 23-552)

Dimensions..... $5\frac{3}{16} \times 3\frac{1}{8} \times 1\frac{5}{16}$ Inches (HWD)
(131 x 80 x 33 mm)

Weight (without batteries).....7 oz

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

9/94

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

5A5

Printed in Hong Kong